

ARCHITEX DIY Static Shade System



5 SIMPLE STEPS

1. Purchase an Architex Static Shade System Kit.

Package includes:

- Shade Sail 280gsm Cloth Knitted
- Monofilament UV Treated 80-90 % Shade
- Colour: Black
- Tensioning Hardware Kit for securing to posts.

2. Decide on the best position to install the shade and bore four holes (600mm dia x 1800 to 2000mm deep) at the required dimensions of your selected kit.

3. Weld the tensioning kits to the top of the posts.
(Note: refer to static shade post detail guide on page 2).

COMPONENTS REQUIRED:

- 1 x Architex DIY Shade Kit
- 4 x steel posts 150NB x 5mm (165mm OD galvanised)
- 2m³ of concrete
- 600mm post hole borer
- Welder

4. Concrete 150NB x 5mm steel posts in place (165mm OD galvanised) with slight outwards tilt.

Ensure two diagonal posts are at least 1m lower than the other two posts to create a twist in the fabric for water runoff.

5. Attach the shade cloth and tension until tight.


Congratulations on completing your Architex Static Shade System Kit.

Call Architex **1300 858 626** for further tips




STATIC SHADE POST DETAIL


3. Attach Ratchet Brackets

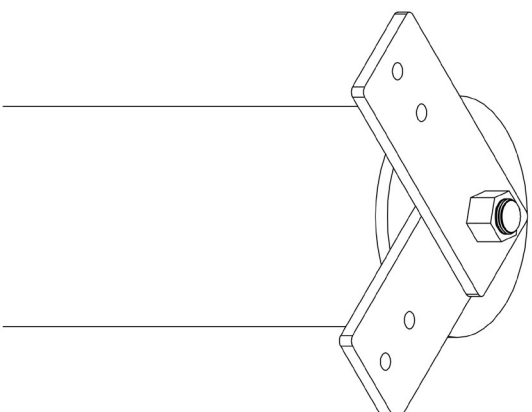


1. Weld Bolthead to underside of Cap

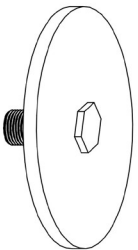

2. Weld Cap to top of post

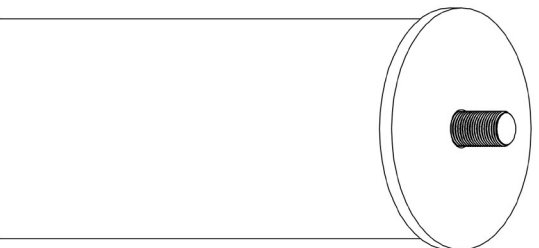

4. Attach Ratchets

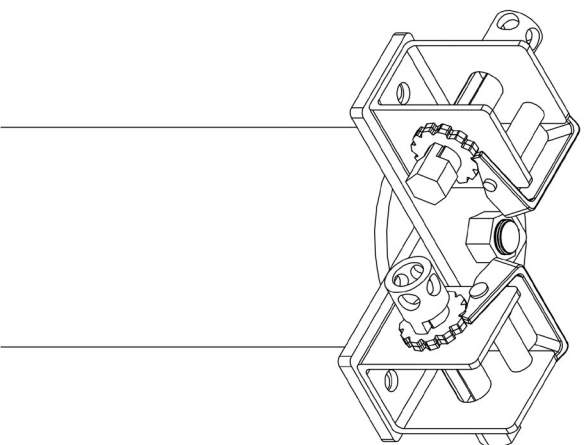

5. Tension Shade Sails (Tighten Post Cap Bolt)

